




# TIN CEILINGS AND MORE



4400 Willow Parkway • Cleveland, OH 44125 • Toll Free: 866-88M-BOSS (866- 886-2677) • FAX: 216-641-7387

## LAY-IN PANEL INSTALLATION

All patterns shown are 23-7/8" x 23-7/8", super-easy lay-in panels, specifically designed to fit into any suspended grid system. When installing panels in an existing 2' x 4' grid system, simply add 2' cross 'T's as needed. For perimeter conditions where panels are not full size, tin-snips can be used to trim the panels to fit.

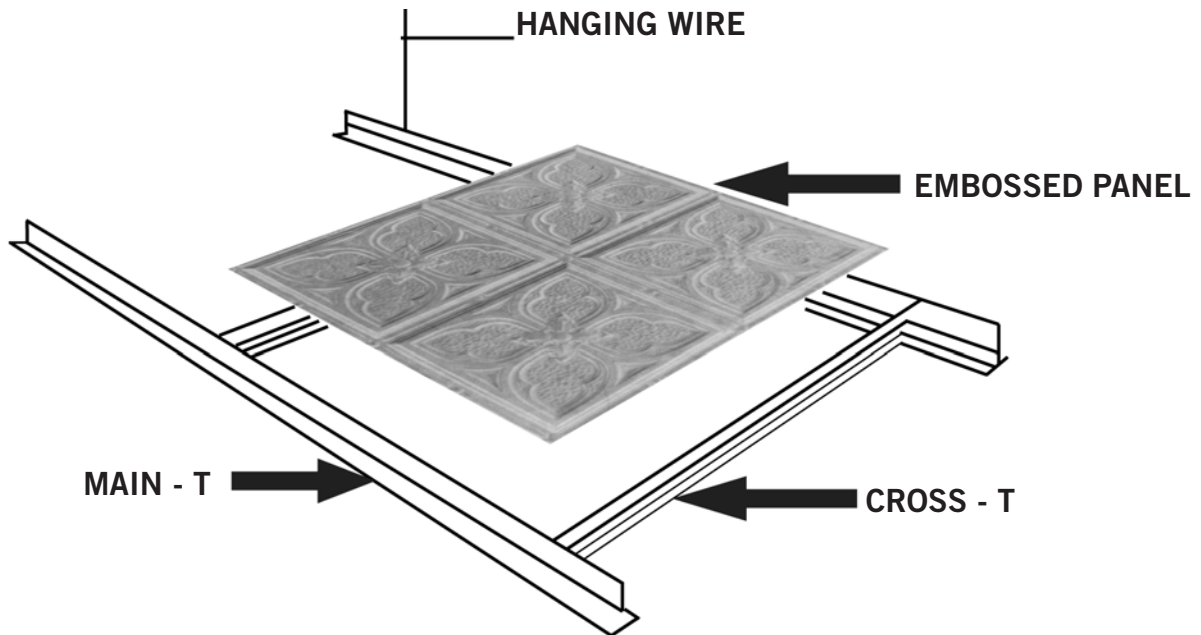

When installing cornice with a suspended ceiling, position the cornice so it spans the ceiling and the wall equally (see "as cornice" picture below), and nail it to the wall and allow it to rest against the suspended ceiling. Continue working around the perimeter of the room by overlapping each consecutive cornice 1/2 inch (repeated pattern will overlap in an interlocking manner). When mitering for corners, use a miter box, a fine toothed hacksaw and gentle unidirectional strokes. Use the same point in the cornice' pattern to begin the cuts of both adjacent pieces to ensure a symmetrical union.

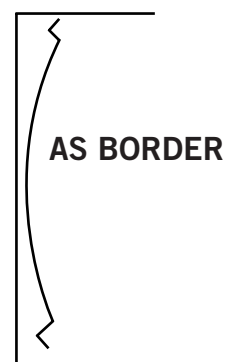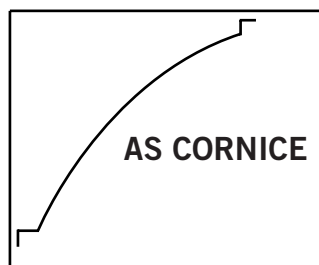

As an option, only some cornice can be nailed up vertical, entirely on the wall, just below the ceiling, as a "border", rather than a cornice. Only certain cornice can be used as a border with a lay-in ceiling installation. Please call our staff for specific cornice recommendations for this type of installation.